

INSTALLATION INSTRUCTIONS

Thank you for purchasing genuine Design Engineering, Inc. products. Be sure to always wear the proper safety equipment when installing any DEI product. Design Engineering Inc. WILL NOT BE HELD LIABLE FOR IMPROPER INSTALLATION OR USE OF THIS PRODUCT. Please follow all instructions provided. If you are unsure of any installation procedure, please contact a certified technician.

DESCRIPTION: 51404
1967-1969 Camaro/Firebird trunk insulation kit

KIT CONTENTS:
Pre-Cut D-mat insulation (3 panels)
Boom Mat damping material.
4 - 2" x 6"
5 - 2" x 12"
2 - 6" x 12"
1 Can Adhesive spray
• Instructions

TOOLS NEEDED:
Scissors

SAFETY:
Safety glasses
Gloves

NOTE OF CAUTION: Wear eye and hand protection when installing all materials.


OVERVIEW: This kit controls heat and sound on the trunks of 67-69 Camaros and Firebirds

STEP 1. Remove all trunk lining material.

STEP 2. Clean trunk floor, floor must be clean and dry from grease, dirt and any other material.

STEP 3. See **Fig 1** for placement of the Boom mat damping material. (Placement marked in red)

STEP 4. Lay out the Boom Mat and then peel the backing and firmly press into place making sure you have full contact with the metal floor.

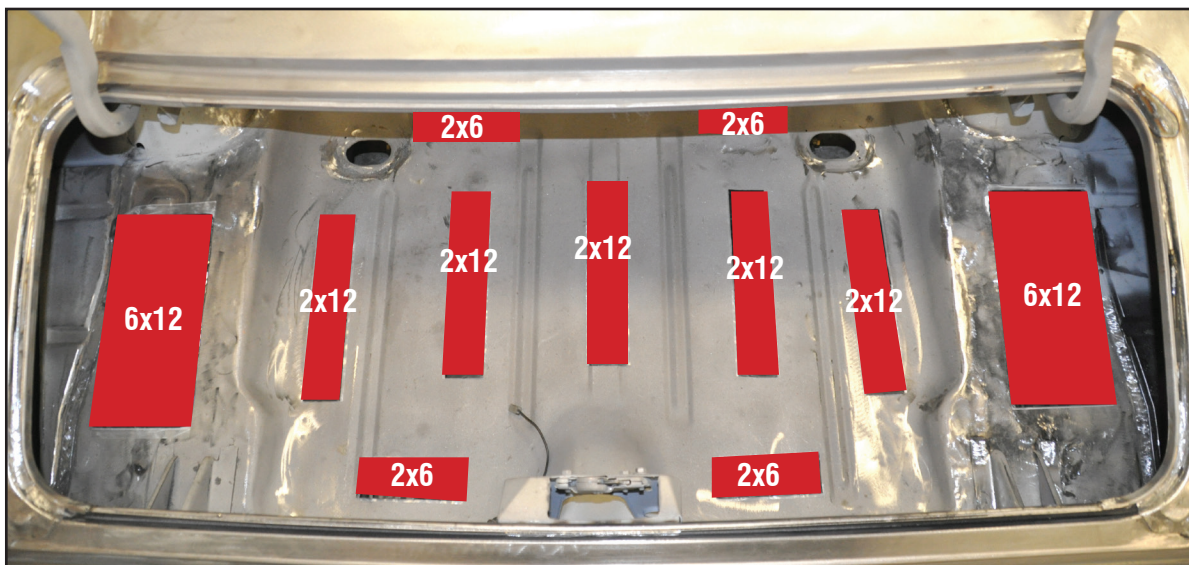

**Damping
Material
Placement**

Fig 1

STEP 5. Pre-Fit the D-Mat insulation material, some trimming maybe needed as slight differences can happen between cars and models. Once you have the panels fitted **Fig 2** use the included spray adhesive to fasten to the trunk floor. Spray the fiber aide of the material and the trunk floor. Allow to dry then press the panel into place. See instructions on the adhesive can.

STEP 6. You can now install your flooring material on top of the insulation.


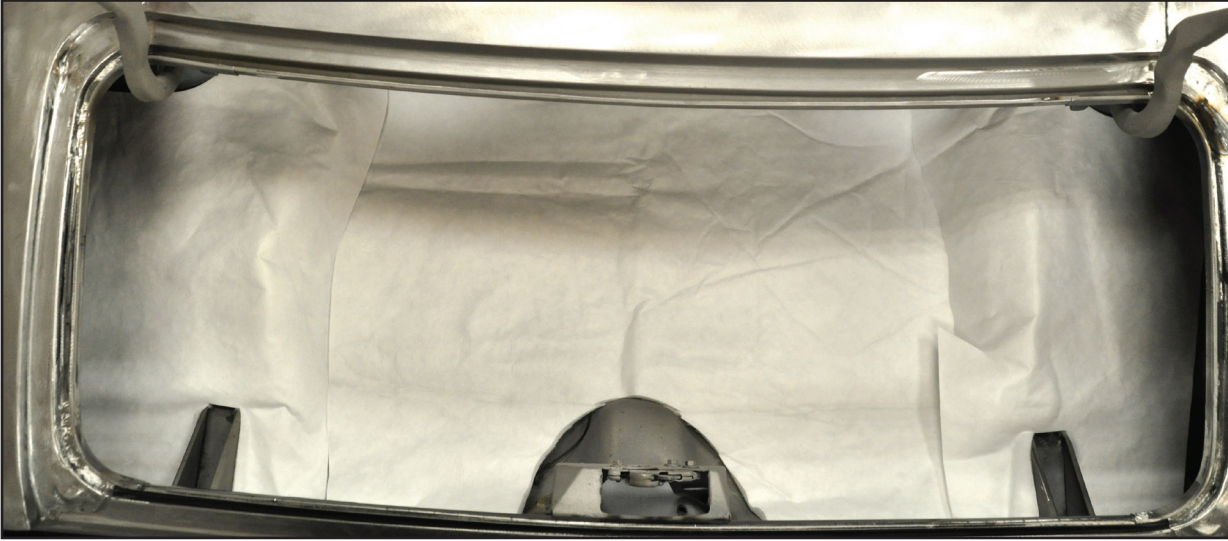


Fig 2



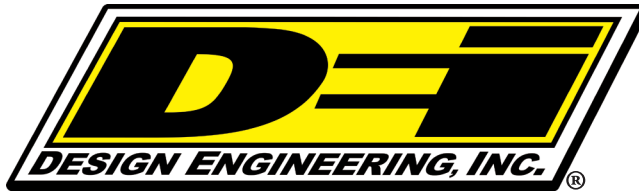

INSTALLATION INSTRUCTIONS

Thank you for purchasing genuine Design Engineering, Inc. products. Be sure to always wear the proper safety equipment when installing any DEI product. Design Engineering Inc. WILL NOT BE HELD LIABLE FOR IMPROPER INSTALLATION OR USE OF THIS PRODUCT. Please follow all instructions provided. If you are unsure of any installation procedure, please contact a certified technician.

DESCRIPTION: 500401 and 500403
1967-1969 Camaro/Firebird complete insulation kit

KIT CONTENTS:
500404,500405,500406,500407,500409,50010,500412.
(500408 optional for coupe)

TOOLS NEEDED:

Scissors

SAFETY:

Safety glasses

Gloves

NOTE OF CAUTION: Wear eye and hand protection when installing all materials.

OVERVIEW: This kit controls heat and sound on the entire 67-69 Camaros and Firebirds

STEP 1. Our DEI complete Camaro consists of individual component kits.

STEP 2. Each component kit includes installation instructions for that kit.

STEP 3. Follow each set of instructions for each kit.

STEP 4. When installing the complete kit we have adjusted the amount of spray adhesive needed.